


# DISHWASHER

## Operating the product

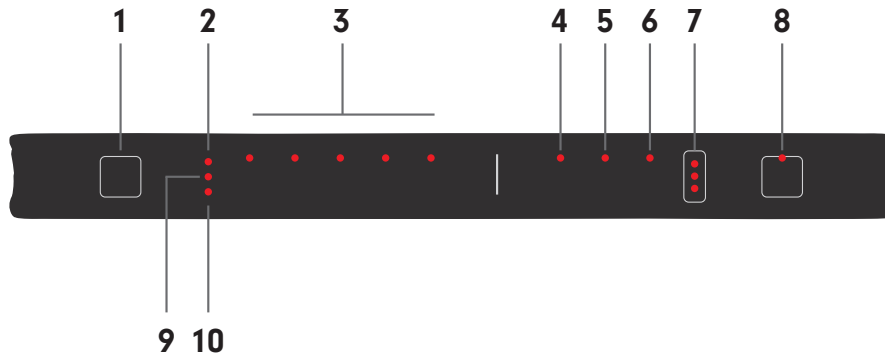

1. On/Off Key
2. Rinse Aid Indicator
3. Programme Indicators / Water Overflow Warning (P1 Flashes)
4. Tablet detergent function
5. Half Load function
6. Delayed Start Key
7. Time Delay Countdown Indicator
8. Start / Pause / Cancel Key
9. Salt Indicator
10. Water Cut-off Indicator

**On/Off key:** When you press the On/Off key, the product that is in the On position will switch on with the Eco programme.

**Programme Selection/Programme Cancel key:** Select the programme by pressing the desired programme key. Press the Start / Pause / Cancel key for 3 seconds to cancel the running programme.

**Function Keys:** If you press any of the Function keys during programme selection or time delay selection, the indicator of the function will flash if the programme you have selected supports the selected function. To cancel the selected function, press the function key again.

## Preparing the machine

1. Open the door of the dishwasher.
2. Place the dishes in accordance with the instructions in the user manual.
3. Make sure that the upper and lower impellers rotate freely.
4. Put adequate amount of detergent into the detergent dispenser.
5. Check if the Salt and Rinse Aid indicators light and add salt and/or rinse aid if needed.

## Programme selection

1. Press the On/Off button to turn on your machine.
2. Refer to the table of "Programme data and average consumption values" to determine a washing programme suitable for your dishes.
3. Selected programme will start when you close the door of your machine.