

HEATING

Temperature Control

- ▲▼ The Up/Down keys allow you to adjust the set temperature.

When you press either key you will see the word **SET** and the desired temperature will be displayed on screen.

- ▲▼ Use the Up/Down keys to adjust the **SET** value.

- A** Press A to confirm settings and return to main display.

Note: In programmable mode, this new temperature is maintained only until the next programmed comfort level. In non-programmable mode, this temperature will be constantly maintained.



Heating On/Off

The heating is indicated **ON** when the flame icon is displayed.

When the flame icon is absent, there is no requirement for heating to achieve the set temperature but the thermostat remains active.

- 🔌 To turn the thermostat **OFF** completely, press and hold the Power button. The display and heating output will be turned off completely.
- 🔌 To turn the thermostat back **ON**, press the Power button once again.

Thermostat completely OFF



Thermostat powered ON

